

ICE VEHICLES

Ш	Be sure each vehicle is carrying 1/8th of a tank of fuel or less.
	Disconnect the negative battery cable. Positive can remain connected.
	Either tape the post or ensure the cable cannot make contact with the post.
	Open the fuel door. Tape over either the gas cap or the fuel intake if there is no gas cap. Leave the fuel door open for fire inspection.
	Be sure hood and battery access panels remain open for fire inspection.
	ELECTRIC VEHICLES
	Either use the LOW VOLTAGE DISCONNECT or DISCONNECT THE NEGATIVE LEAD from the 12-VOLT BATTERY.
	Be sure fire inspectors are able to visually inspect the disconnected component – low voltage disconnect or 12-volt battery.
	ALL VEHICLES
	Deliver the fob/keys to each vehicle to the Auto Expo office located in the convention center Elm St. concourse near the main entrances to the exhibit floor and ticket windows.